



1. Open box and carefully lay out all pieces. Keep plastic on poles to reference part number until bimini is complete.



2. Identify and separate all curved rib poles. Connect the following poles together:
  - 2 BOW BIMINI:** Ribs 1 & 3 and ribs 2 & 4
  - 3 BOW BIMINI:** Ribs 1 & 4, ribs 2 & 5, and ribs 3 & 6
  - 4 BOW BIMINI:** Ribs 1 & 5, ribs 2 & 6, ribs 3 & 7, and ribs 4 & 8




3. Lay out bimini canvas top down. Identify label that says "Front".

**Note:** Round bimini covers have the boot sock attached. Secure boot sock by zipping the sock to the bottom of the canvas.



4. Feed connected ribs in the pockets of the canvas in the following order:
  - 2 BOW BIMINI:** Ribs 1 & 3 in the front pocket, and ribs 2 & 4 in the rear pocket
  - 3 BOW BIMINI:** Ribs 1 & 4 in the rear pocket, ribs 2 & 5 in the middle pocket, and ribs 3 & 6 in the front pocket
  - 4 BOW BIMINI:** Ribs 1 & 5 in the rear pocket, ribs 2 & 6 in the middle rear pocket, ribs 3 & 7 in the front middle pocket, and ribs 4 & 8 in the front pocket

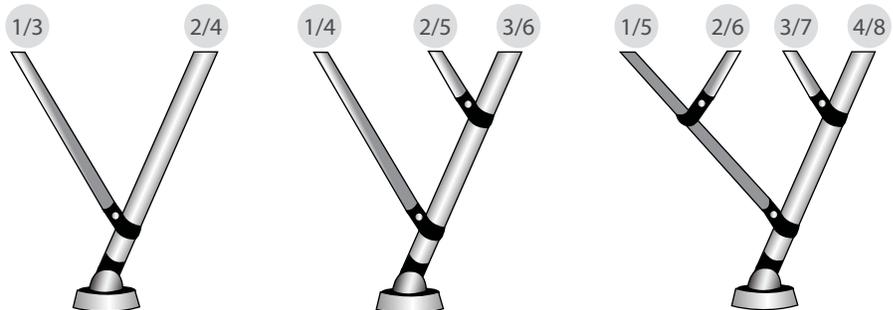

5. Assemble the remaining straight poles in the following order:
  - 2 BOW BIMINI:** Poles 1 & 3 and poles 2 & 4
  - 3 BOW BIMINI:** Poles 1 & 4, poles 2 & 5, and poles 3 & 6
  - 4 BOW BIMINI:** Poles 1 & 5, poles 2 & 6, poles 3 & 7, and poles 4 & 8

## WARNING

- Do not lay bimini canvas directly on boat seats or other leather surfaces. Especially if canvas is wet or in direct sunlight.
- Do not use soaps or other harsh cleaning agents to clean canvas. To clean, spray with water and pat dry with a clean towel.
- Dry canvas fully before collapsing and storing.



6. Connect the straight poles to the curved ribs by joining the same numbers together with the provided screws. Make sure that front and rear brackets are facing outward.



7. Attach rear support poles to the back using the black nylon brackets. Secure with provided nuts and screws.



8. Attach the front support straps to the brackets in the front of the bimini.



9. Once built, open the bimini top and locate the best position on your boat.

**Note:** There will be 12" of flex in or out on bimini when attaching to boat.




10. Install mounting hardware to the deck or side of your boat. Drill 3.2mm holes and attach the mounting hardware using the screws provided.

11. Attach the bimini poles to the deck/side mount fittings.



12. Drill 3.2mm holes into the boat and screw the provided stainless steel saddle fittings into positions.

13. Attach front straps to the saddle fittings and tighten straps.

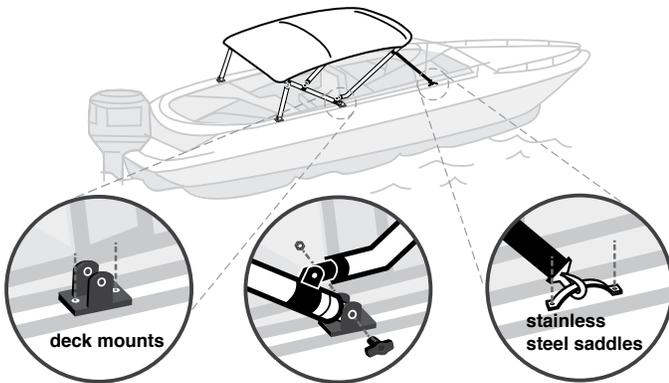

**Please Note:**

- If drilling into fiberglass, countersink holes drilled to prevent chipping.
- If drilling into Alloy, use a barrier paste such as "Duralac" to prevent corrosion (not provided).

**Closing Bimini & Attaching Cover**



1. Unhook front straps from the saddle fittings.



2. Round bimini tops have the boot sock attached in a zippered pocket. Unzip the boot sock from underneath the canvas.



3. Collapse the bimini and pull provided boot sock or attached boot sock over the canvas.



4. Zip boot sock into place to secure bimini in the collapsed position.